

## NOSE ASSEMBLY DATA SHEET




## ASSEMBLY:

## Notes:

- A. Apply Vibra-tite® p/n 405125 to all threads and allow it to set 20 minutes prior to assembly.
- B. Tighten collet extension (6) to piston on tool 80-100 IN-LB torque.
- C. If nose assy is assembled as it is when purchased new, follow steps 3-5 to attach to tool.
- 1. Insert super grip jaw assy (3) into rear of collet (2). (Note direction in exploded view).
- 2. Thread collet (3) to extension-collet (6) using flats provided on collet-extension (6) and on collet (3).
- 3. Thread assembled collet (3) and extensioncollet (6) onto piston of tool using flats provided and hex on rear of piston.
- 4. Slide anvil & holder assy (1) over collet (2).
- 5. Slide nut over rib on anvil (see exploded view) and tighten to tool.



Reverse assembly instructions.

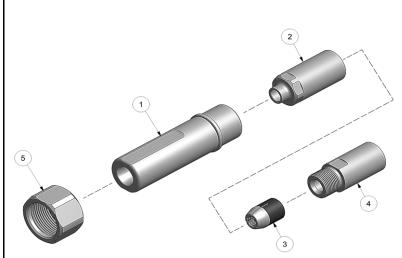





4/06 REV 10/18

MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505 solutions@gagebilt.com / www.gagebilt.com

Type:			Fasteners:	Recommended Tool: GB756	
Single Action 5/16 & 3/8 Ø			MAGNA-GRIP®	Alternate Tools: GB2581(A)	
Ref.			•		MG12-
No.	Qty.		Description		756-28
1	1	Anvil		11051	11250
2	1	Collet		21040	21244
3	1	Super-Grip Jaw Assy		31027-S	31227-S
4	1	Extension-Collet		71219	71219
5	1	Nut		71250	71250